

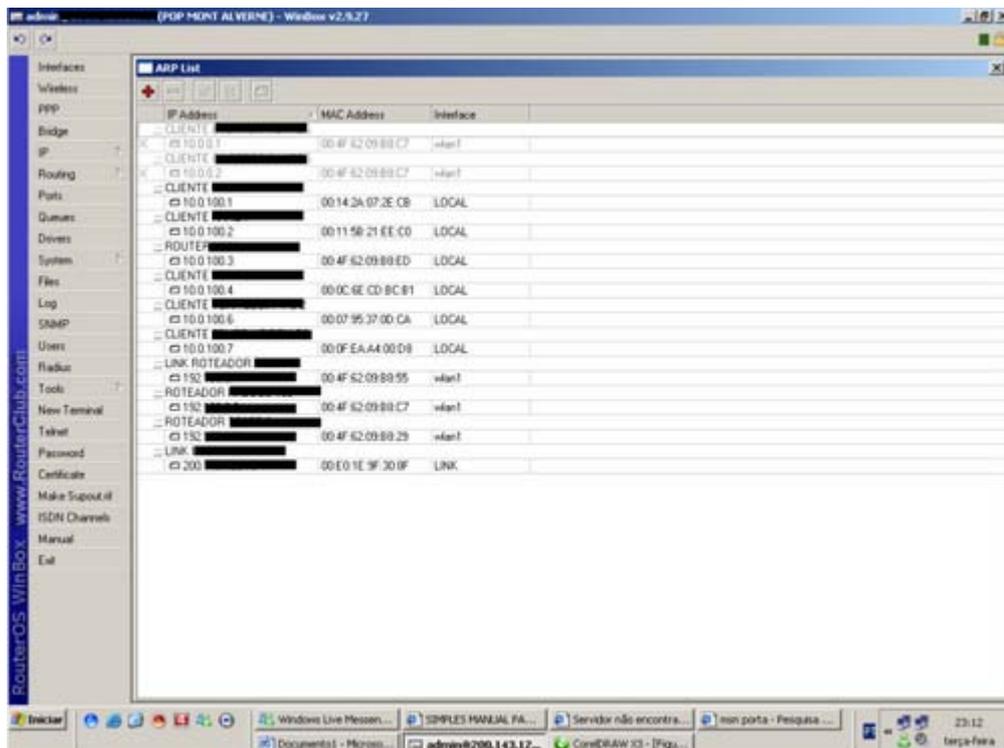


Como amarrar IP/MAC

Acesse o menu IP, ARP

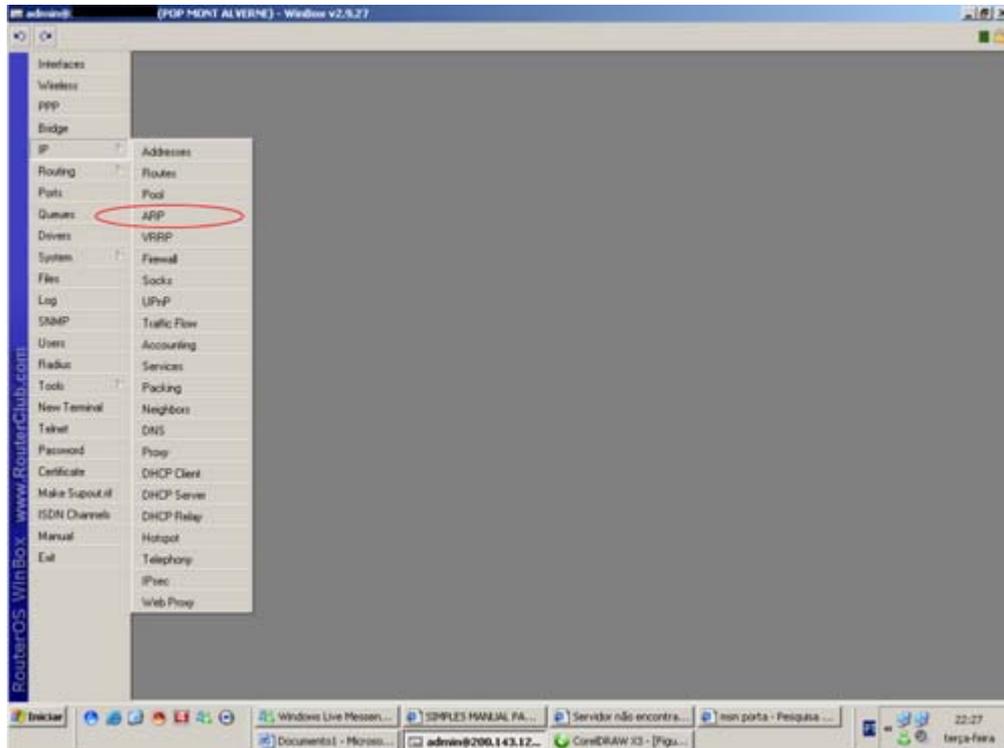



Crie uma nova “ARP” (botão “+”)

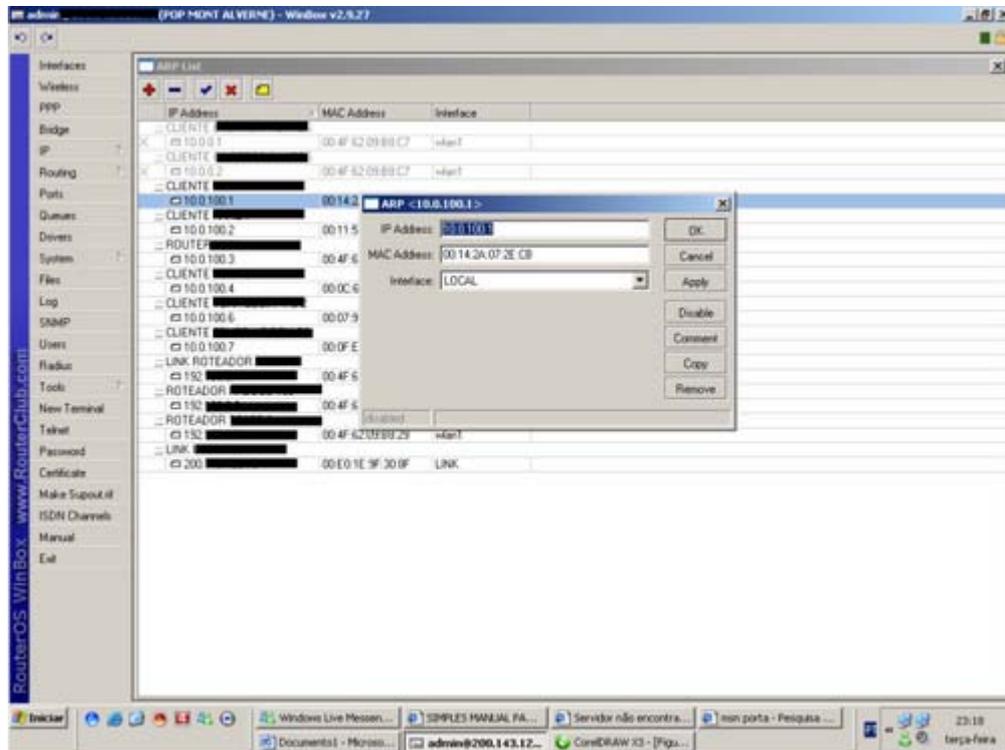

Digite o IP da máquina a qual quer amarrar, o MAC ADDRESS e a INTERFACE a qual a máquina será ligada.

Em COMMENT, dê o nome desta ARP, como no exemplo acima.

Acesse o menu, INTERFACE

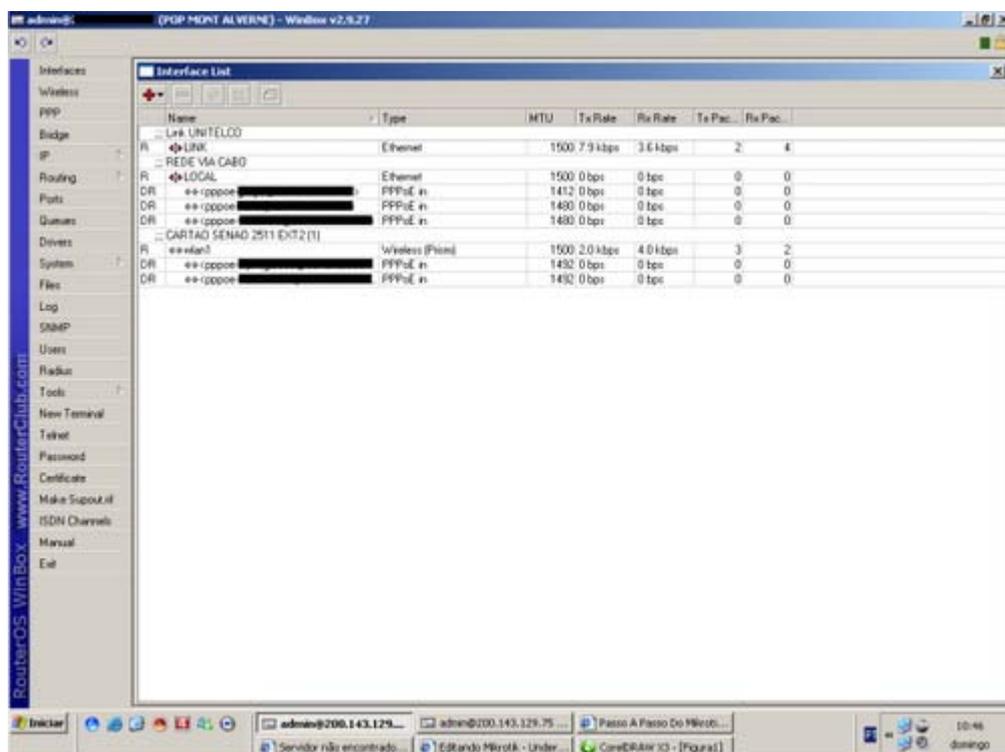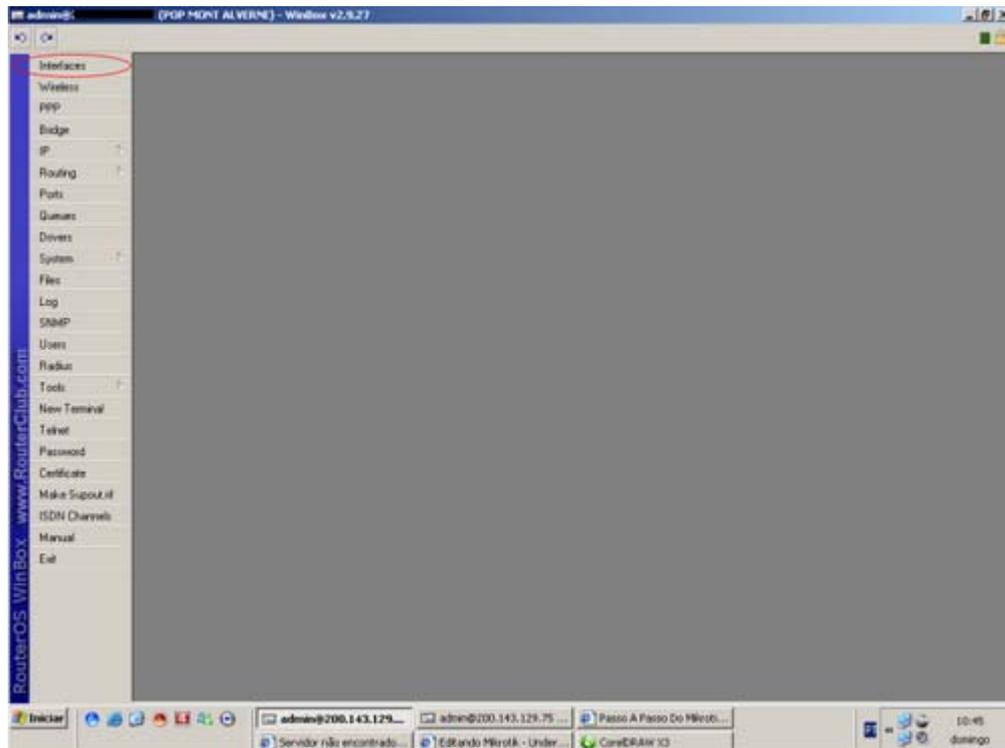

Como último procedimento, você deve habilitar em sua interface, o ARP para reply-only.



The screenshot displays the Mikrotik WinBox interface for configuring a network device. The main window shows the 'Interface List' table, and a smaller 'Interface vLINK' dialog box is open in the foreground.

Name	Type	MTU	Tx Rate	Rx Rate	Tx Pac.	Rx Pac.
vLINK	Ethernet	1500	30.8 kbps	6.8 kbps	4	7
REDE VIA CABO						
LOCAL	Ethernet	1500	238 bps	475 bps	1	1
pppoe	PPPoE in	1412	0 bps	0 bps	0	0
pppoe	PPPoE in	1480	0 bps	0 bps	0	0
CARTAO SENAO 2511 EX12 (1)						
vlan1	Wireless (Picon)	1500	1774 bps	3.8 kbps	2	1
pppoe	PPPoE in	1492	0 bps	0 bps	0	0
pppoe	PPPoE in					

The 'Interface vLINK' dialog box shows the following configuration:

- General: Ethernet, Status: Traffic
- Name: vLINK
- Type: Ethernet
- MTU: 1500
- MAC Address: 00:0E:A6:92:E2:94
- ARP: reply-only (selected)

Buttons: OK, Cancel, Apply, Disable, Comment.