PROCEDIMENTOS P/ INSTALAR O MIKROTIK NA RB VIA NETINSTALL

Executar o Netinstall no PC, ele pode ser baixado pelo site da 'mikrotik.com'

http://download2.mikrotik.com/netinstall-5.15.zip

Groove=

http://download2.mikrotik.com/routeros-mipsbe-5.15.npk

Abrir o Netinstall, clicar em 'Net booting' e setar um IP para ele, marcando a opção 'Boot Server Enable'

outers/Dir	103				
Label	MAC address / Media	Status	Software ID:		Help
EEA EFA	Removable media R Removable media R	Ready Ready	Key:		Browse
			☐ Keep old configuration		Get key
			IP address:	-1	
			Gateway:	_	
			Baud rate:		
		. 1 .		<u> </u>	
лаке порр	y Net booling	stan La	ance: Lonfigure script		
ackages -		1	Sec. 1		
ets:	Ľ l	Save set	Delete set		
rom: C:V.	Jsers\Normis\Desktop		Browse	Select all	Select no
ame	Varian	Description			
Name 🖲 routeros	Version smipsbe 3.19	Description RouterDS for R	outerBOARD RB4xx, includes all supp	ooted features	
Name S routeros ded 1 pac	Version smipsbe 3.19 ckage(s)	Description RouterOS for R	ioute:BOARD RB4xx, includes all supp	ootted features	
Name routeros ded 1 pac	Version s-mipsbe 3.19 ckage(s)	Description RouterOS for R	ioute:BOARD RB4xx, includes all supp	ported features	

Clicar no botão 'Browse' do NetINstall e selecionar a pasta onde esta o pacote do Mikrotik, lembrando que o pacote deve ser baixado na sessão de 'download' do site 'mikrotik.com', dando preferência em baixar o 'NPK File', da qual possui os pacotes básicos para seu funcionamento.

Setar um IP em sua placa de rede na mesma classe do IP que foi setado no NetInstall (ex: 192.168.1.1)

Colocar o cabo de rede de sua maquina na ether1 (porta PoE) da RB

Ligar a RB com o botão 'BIOS reset' pressionado e permanecer até a RB dar os 2 beeps ou então até a RB ser encontrada no 'NetInstall'.



Na tela do 'NetInstall', selecionar o pacote pretendido e em seguida clicar em 'Install'.

Se a opção 'Keep old configuration' estiver marcada, a reinstalação do Mikrotik é feita tentando manter as configurações anteriores.

Mikrotik R	outer Installer v 3.22			
Label	MAC address / Media	Status	Software ID: NUD8-PTT	Help
😋 nstreme	00:0C:42:21:F1:E9	Ready	Key: <a>key <a>key <a>key>	(N+X Browse
			Keep old configuration	Get key
			IP address:	/
-			Gateway:	
Selected 1 pa	ckage(s)		Baud rate: 115200	
Make floppy	Net booting In	stall Cance	Configure script:	
Packages Sets:	•	Save set De	lete set	
From: C:\Do	curnents and Settings\mo	nitor\Desktop\ E	rowse Se	lect all Select none
Name	Version De	escription		
routeros-n	nipsbe 3.22 🛛 Ro	outerOS for RouterBC	ARD RB4xx, includes all supported fea	atures

Quando terminar a instalação, sua RB será rebootada, já voltando então com o Mikrotik instalado.