Procedimento OBRIGATÒRIO em Gateway FXO.

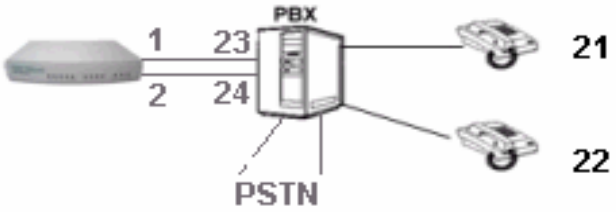

Acesse a porta FXO do gateway pelo PABX:

Exemplo: O ramal 23 e 24 estão ligados nas portas 1 e 2 do gateway FXO
Do ramal 21 digite 23 para atender a porta 1 FXO do gateway.
Do ramal 22 digite 24 para atender a porta 2 FXO do gateway.

1º passo: conectar na porta fxo do equipamento e discar **# , em cima do tom de linha discar 208 (após o "To do" tom de confirmação) colocar rapidamente no gancho.

2º passo: entrar na tela da interface do voip entrar em Trunk Management depois CPT/Cadence Settings e visualizar em Busy Tone Cadence Measurement as cadencias que o voip ira pegar .

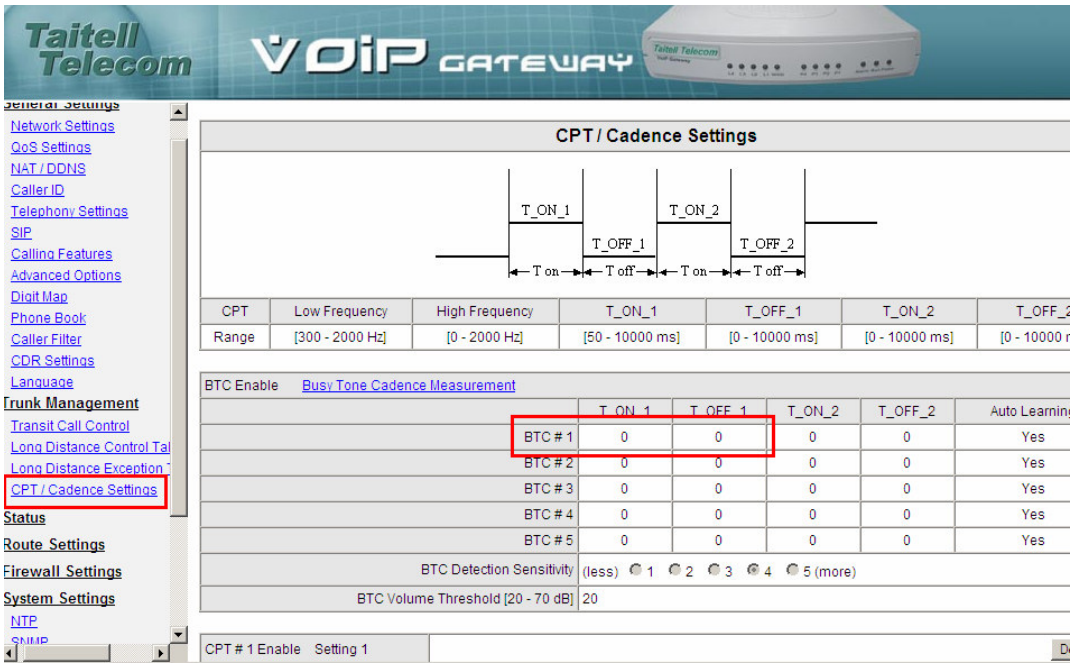

3º passo: quando informar os valores nas duas colunas na primeira linha de BTC # 1, em seguida desabilitar todos os Auto Learning

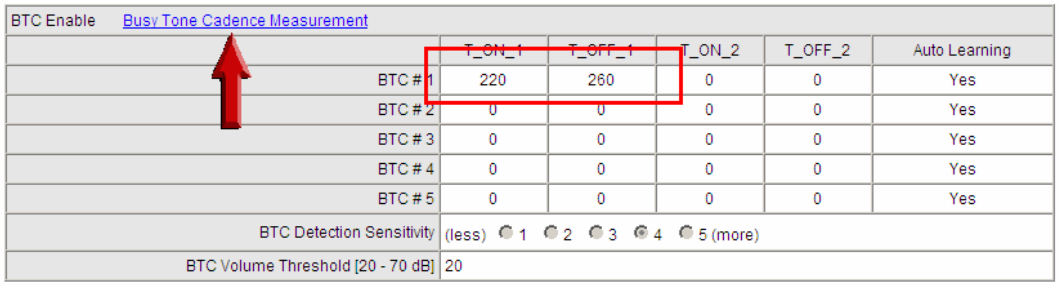

BTC Enable	Busy Tone Cadence Measurement				
	T_ON_1	T_OFF_1	T_ON_2	T_OFF_2	Auto Learning
BTC # 1	220	260	0	0	Yes
BTC # 2	0	0	0	0	Yes
BTC # 3	0	0	0	0	Yes
BTC # 4	0	0	0	0	Yes
BTC # 5	0	0	0	0	Yes
BTC Detection Sensitivity	(less) ○ 1 ○ 2 ○ 3 ◉ 4 ○ 5 (more)				
BTC Volume Threshold [20 - 70 dB]	20				

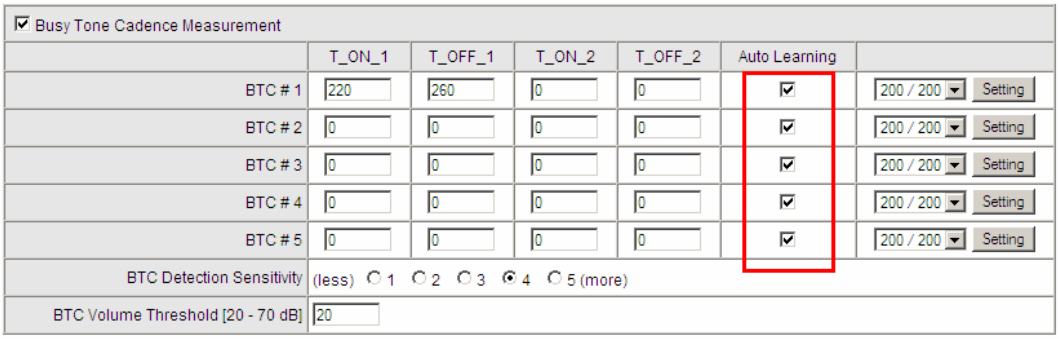

☑ Busy Tone Cadence Measurement						
	T_ON_1	T_OFF_1	T_ON_2	T_OFF_2	Auto Learning	
BTC # 1	220	260	0	0	☑	200 / 200 Setting
BTC # 2	0	0	0	0	☑	200 / 200 Setting
BTC # 3	0	0	0	0	☑	200 / 200 Setting
BTC # 4	0	0	0	0	☑	200 / 200 Setting
BTC # 5	0	0	0	0	☑	200 / 200 Setting
BTC Detection Sensitivity	(less) ○ 1 ○ 2 ○ 3 ◉ 4 ○ 5 (more)					
BTC Volume Threshold [20 - 70 dB]	20					

- clicar em accept e depois Save e Restart.

Obs.: deve-se ativar a proteção de dados da central PABX.